


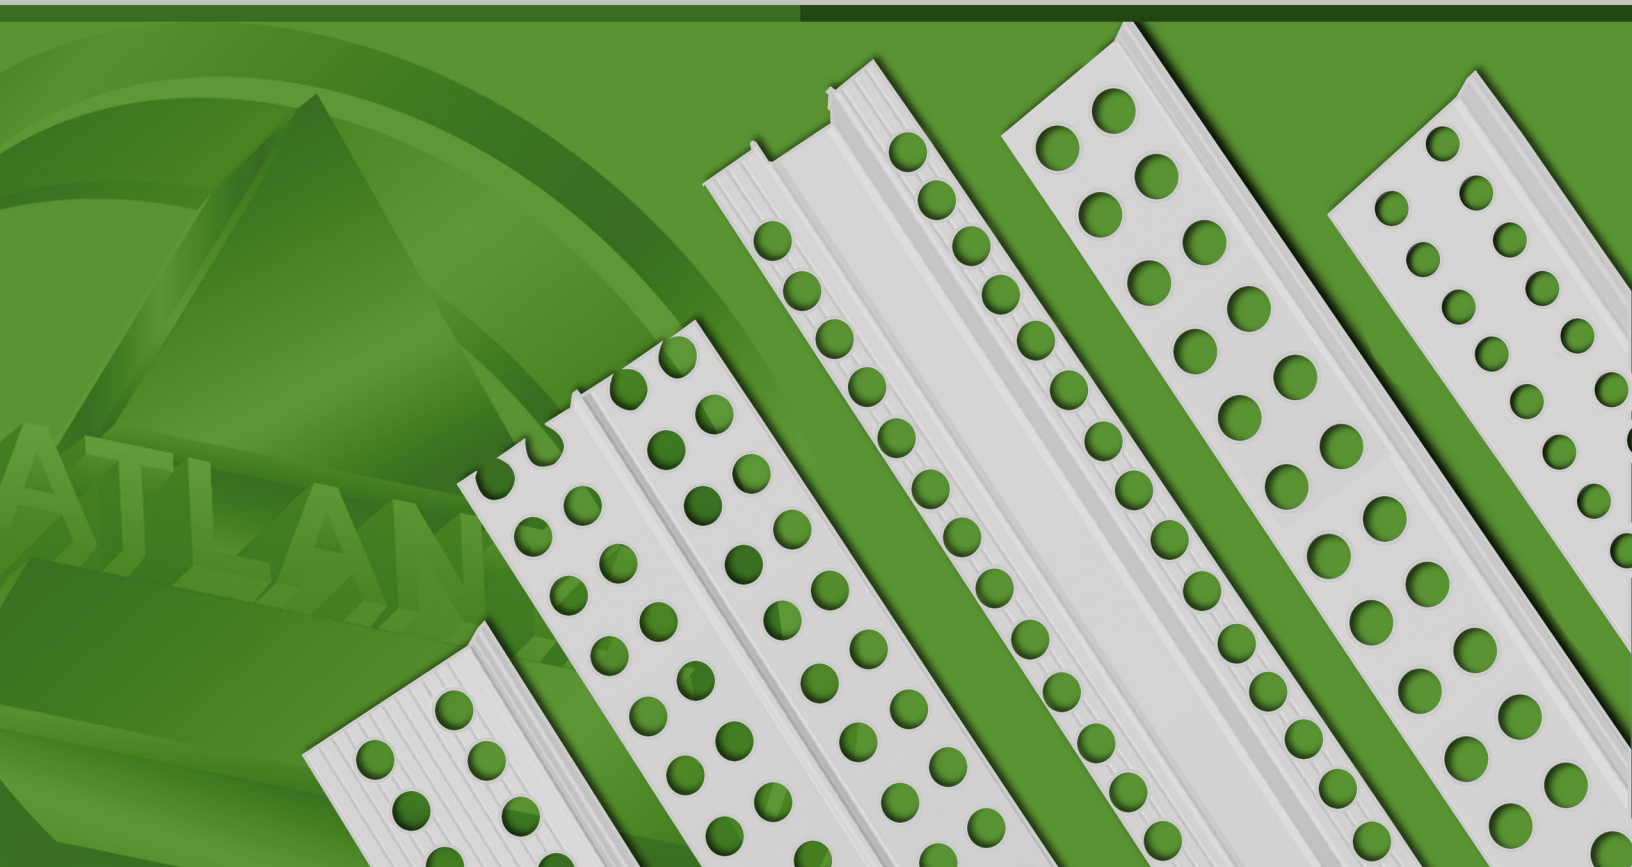

ATLANTA PVC PLASTERING GUIDE





APPLICATION:

Atlanta Plastering Guide serves as a guide in plastering concrete during construction to achieve an even plaster.

ADDED FEATURE:


For decorative purposes

ADVANTAGES:

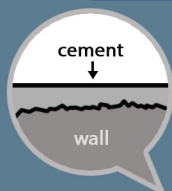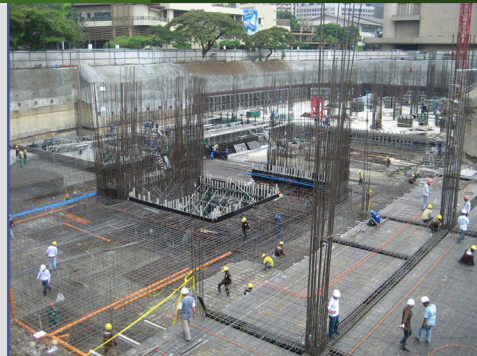


- Easy to install
- Cost efficient
- Time efficient
- Guarantees even plaster




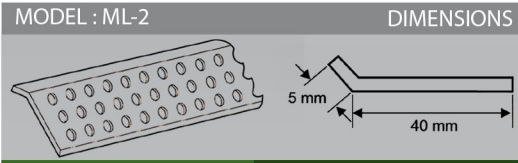


For inner corners of walls & along length of walls.

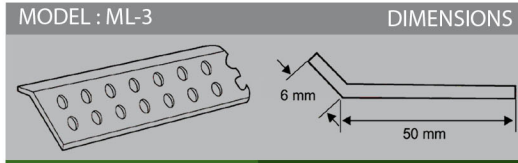


For inner corners of walls & along length of walls.

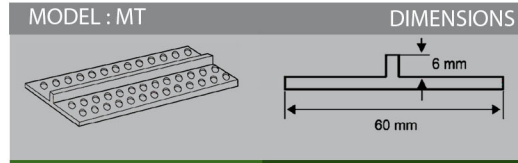


For circular columns.

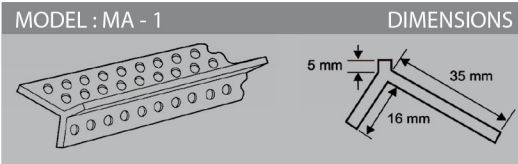


For outer corners of columns, walls, window openings & beams.

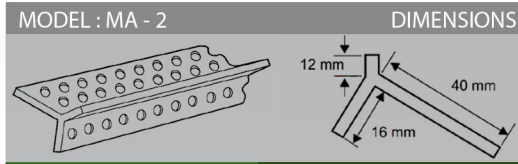


For outer corners of columns, walls, window openings & beams.

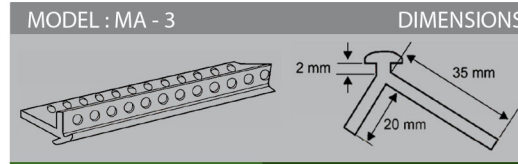


For rounded corners of columns & walls.

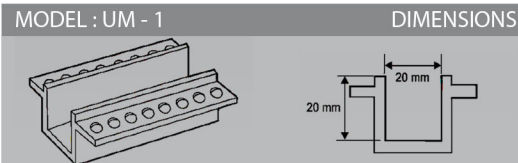

For drip mould & construction joint grooves.

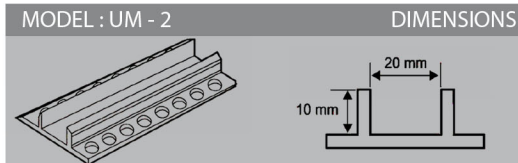


For drip mould & construction joint grooves.

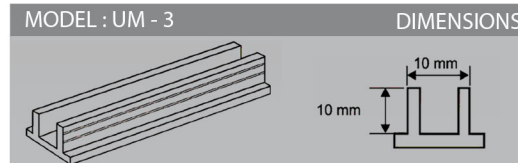


For drip mould & construction joint grooves.

INSTALLATION GUIDE

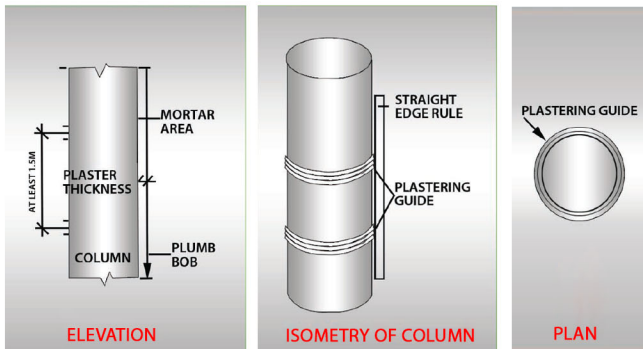


FOR MODEL MT

1. Determine the needed thickness of plaster by using a plumb bomb.
2. Apply sufficient coat of mortar on the surface of column where the Plastering Guide shall be set.
3. Set/bend the guide around the column, aligned it with plumb bob string & lock both ends with an improvised lock & let it dry.
4. Apply plaster on the surface.
5. Shaved-off excess plaster with a straight edge rule using the fins of Plastering Guide as a guide to smoothen & even the plaster surface.

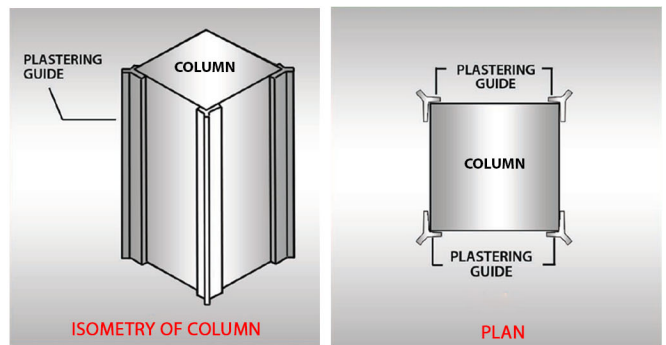


FOR MODELS MA-1, MA-2, MA-3

1. Follow procedure 1 & 2 of Model MT.
2. Set the guide on the outer corner of columns, walls, window opening & beams aligned it with the plumb bob string & let it dry.
3. Follow procedure 4 & 5 of Model MT.

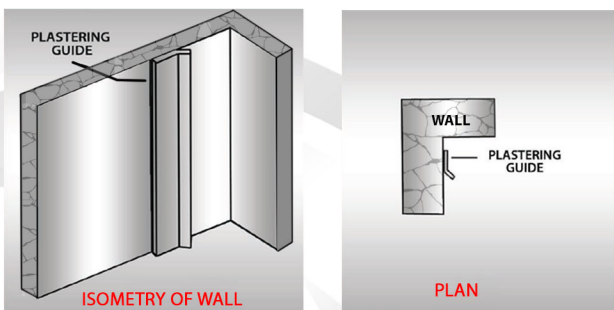

FOR MODELS ML-2 & ML-3

1. Follow procedure 1 & 2 of Model MT.
2. Set the guide on the inner corner of walls, columns & along length of walls, aligned it with plumb bob string & let it dry.
3. Follow procedure 4 & 5 of Model MT.

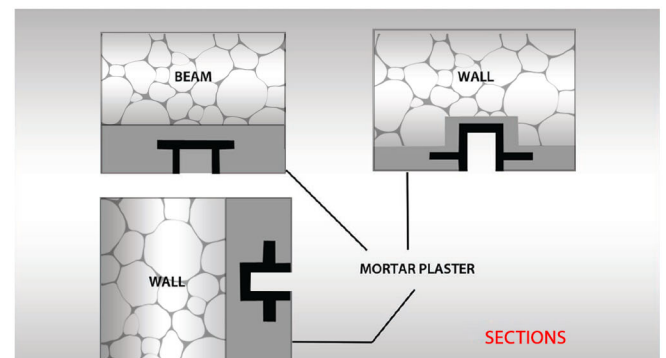

FOR MODELS ML-2 & ML-3

1. Follow procedure 1 of Model MT.
2. Chipped off concrete if necessary, then apply sufficient coat of mortar to the groove.
3. Set the guide into the groove, aligned it & let it dry.
4. Follow procedure 4 & 5 of Model MT.